


	Page
52 10 000 Removing and Installing Front Seat .....	52-10/1
180 Removing and Installing Outer Front Seat Catch .....	10/1
185 Removing and Installing Inner Front Seat Catch .....	10/2
424 Adjusting Seat Backrest Lock Cable .....	10/2
52 20 000 Removing and Installing Rear Seat Cushion and Backrest .....	20/1


52 10 000 REMOVING AND INSTALLING FRONT SEAT

Loosen front screws.

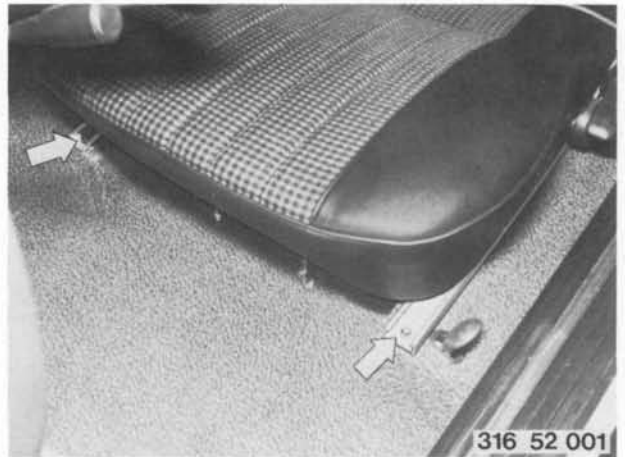

Loosen rear screws.

Installation Note! Mount stop (1) for seat in forward direction.

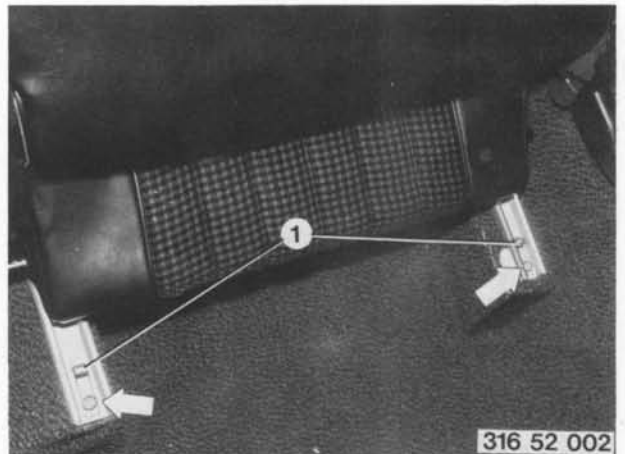


52 10 180 REMOVING AND INSTALLING OUTER FRONT SEAT CATCH


Remove and install front seat - 52 10 000.  
Detach inner seat catch and disconnect connecting linkage at outer seat catch.

Installation Note! After seat is installed adjust catch that seat rail engages.



Press off seat adjusting control knob.  
Loosen screws and remove seat catch.

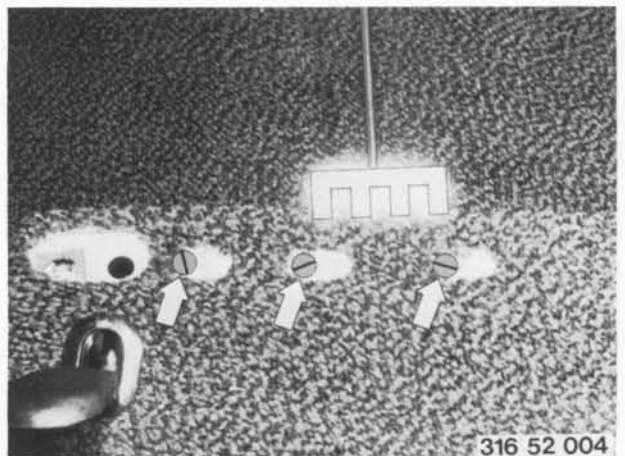


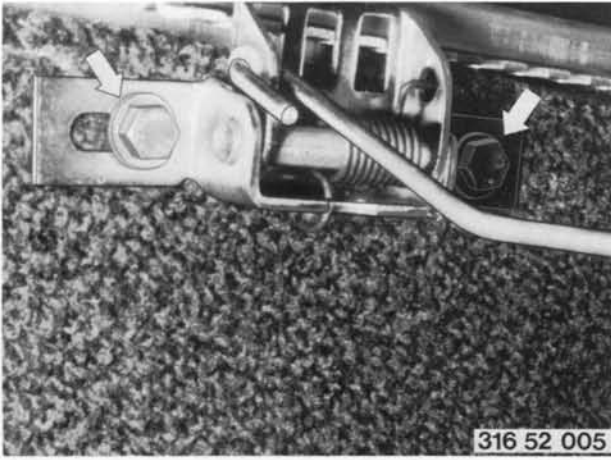

52 10 185 REMOVING AND INSTALLING INNER FRONT SEAT CATCH

Loosen screws and detach connecting linkage.


Installation Note! Install seat catch that seat rail engages.

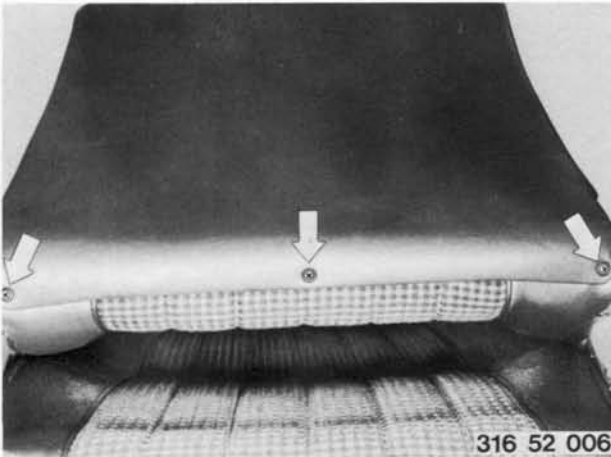

52 10 424 ADJUSTING BACKREST LOCK CABLE

Loosen screws on rear wall.

Pull down and remove rear wall.

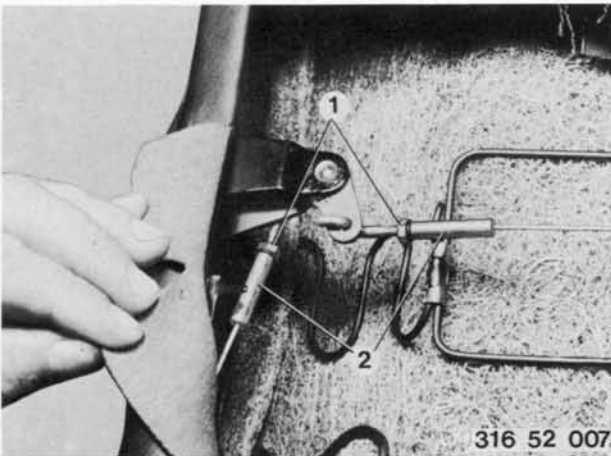

Loosen counter nuts (1). Adjust cables uniformly with adjusting sleeves (2). Counterlock sleeves with nuts.

52 20 000 REMOVING AND INSTALLING REAR SEAT CUSHION  
AND BACKREST

Remove covers.  
Loosen screws.  
Remove rear seat cushion.



Loosen screws.  
Slide up and remove backrest.

